



Caliber Pro USA
13893 Willard Rd, EF, Chantilly, VA 20151
All rights reserved @2024 Caliber Pro Inc
info@caliberprocorp.com, +17039913108
Follow us@caliberbeauty

 
Importer:
Bratt Trading Ab, Radiovägen 34
135 48 Tyresö Sweden

EN



PROFESSIONAL TRIMMER


DESIGNED FOR THE PROFESSIONAL

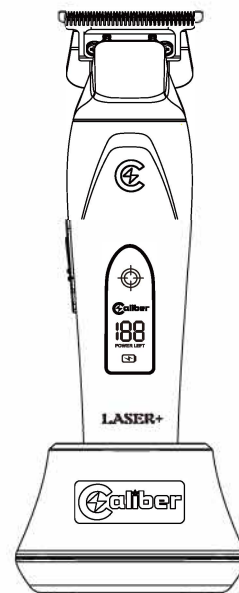

LASER+

Operating Manual

 Components

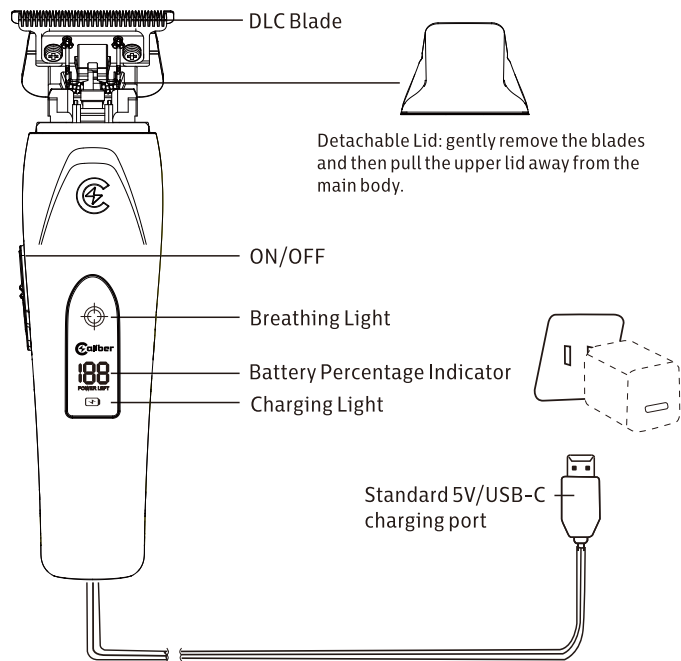

Combs



Brush



Standard 5V/USB charging port

Parameters

PROFESSIONAL TRIMMER	Motor	Operating voltage: 3V ===
		Powerful Brushless Motor
	Battery	2000 mAh Li-ion battery
		Charging time: about 3 hours
		Operating time with full charge: about 3 hours
	Charge	USB connect with adapter 5V === 1000mA
		Power: 5W

Use the Rechargeable Mode



Plug the charger into the clipper's tail and connect it to a power source to initiate the charging process.

The indicator will illuminate, signaling the commencement of the charging cycle.

Fixed-length Function

A: Features(1.5、3、6MM) 3 lengths adjustment to contro hair length

1. To determine the length of haircut.
- 2.To select the appropriate guards.



 
Mount the guards :

1. Installing the guards:

- *Align the guard comb with the blade edge.
- *Gently push forward to secure it in place


2.Removing the guards:

- *To disassemble the guards, simply pullit firmly.

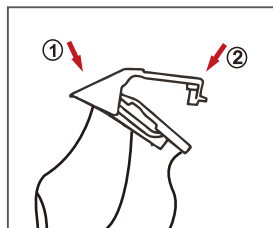


Blade Removal & Installation

 Blade Removal

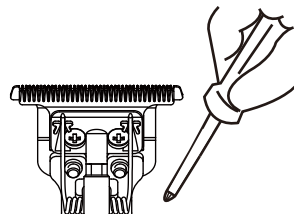


 - Use a screwdriver to loosen and remove the two screws securing the guarding blades.

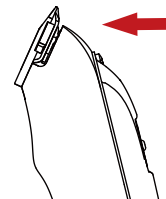


- To prevent the blades from falling, use another hand to securely hold them during the removal process.

 Blade Installation

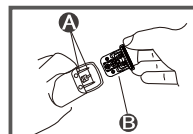

 
- Attaching the Blade Spring:
 1. Align the blade spring with spring A on the blades side B.
 2. Insert two fixed screws and securely fasten them while holding them down.

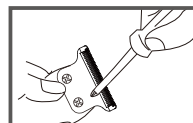

- Securing the Blades:
 - Use a screwdriver to tighten the screws, ensuring the head of the blades will not fall off.


Blades cleaning and maintenance

 Blade Cleaning

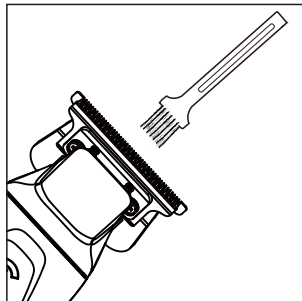

Cleaning the blade with a cleaning brush:
Gently sweep the cleaning brush across the blade to remove any hair or debris, ensuring a thorough cleanup.

 Lubrication

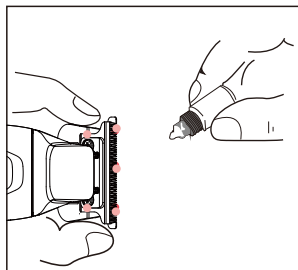


Before or after use, maintain the blade by applying a few drops of oil to the designated red points, as shown in the left picture.

Note



 1. Avoid Disassembly: Please refrain from disassembling the product.
2. Cleaning Instructions: Only use a slightly damp cloth or neutral liquid soap to clean the product.

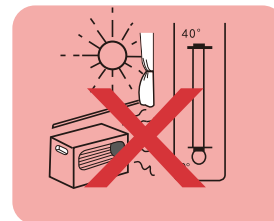

3. Temperature Guidelines: Never charge the product in environments exceeding 40°C or below 0 °C. Note that slight heating during operation or charging is normal.
4. Battery Disposal: After the battery's lifespan ends, remove and dispose of it in a safe manner at the designated recycling site. Never discard it randomly.
5. Water Avoidance: Do not use water to wash the clipper and keep it away from damp environments while in operation.

Please read the following instructions before using the new caliber professional Trimmer

IMPORTANT SAFETY INSTRUCTIONS

Children should be supervised to ensure that they do not play with this appliance. When using electric appliance, especially when children are present, basic safety precautions should always be followed, including the following.

READ ALL INSTRUCTIONS BEFORE USING

WARNING: KEEP APPLIANCE DRY. KEEP AWAY FROM WATER WHEN IT IS CHARGING

DANGER: As with most electrical appliances, electric parts are electrically live when switch is OFF.

To reduce the risk of death by electric shock:

- 1. Do not use while bathing or in shower.
- 2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
- 3. Do not place it in or drop it into water or any other liquid.
- 4. If an appliance falls into water, unplug it immediately. Do not reach into the water.
- 5. Always unplug this appliance from the electrical outlet immediately after using. Unplug this appliance before cleaning.



WARNING: To reduce the risk of burns, electrocution, fire or injury to persons:

- 1. The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given instruction and supervision.
- 2. Children should be supervised to ensure that they do not play with this appliance.
- 3. An appliance should never be left unattended when plugged in.
- 4. Close supervision is necessary when this appliance is used by, on, or near, children or individuals with certain disabilities.
- 5. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 6. The appliance is only to be used with the low voltage power unit provided.
- 7. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, or damaged, or dropped into water. Return the appliance to a service centre for examination and repair.
- 8. Never allow the power supply cord to be pulled, jerked, strained, twisted, or severely bent, especially at the plug connections. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Handle the cord carefully for longer life of cord.
- 9. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
- 10. Never drop or insert any object(s) into any opening.
- 11. Do not use outdoors or operate where aerosol spray products are being used or where oxygen is being administered.
- 12. Do not use an extension cord with this appliance.
- 13. Never use while sleeping.
- 14. Do not operate with voltage converter.
- 15. Do not use this appliance with a damaged or broken comb, as facial injury may occur. To disconnect, turn the switch to "off" then remove plug from outlet.

SAVE THESE INSTRUCTIONS

Warranty Card

Product Name	Rechargeable Cliper for the Professional	Warranty Period
Product Model		Within one year since the purchase date
Purchase Date	From: (M/D/Y)	To: (M/D/Y)

Customer	Add.		Name	
			Tel.	
Retailer	Add.		Name	
	Name		Tel.	

Product Assurances :

- 1. Quality and Precision: This product is crafted with utmost precision, adhering to rigorous quality management and inspection processes to ensure excellence.
- 2. Maintenance Coverage: For any operational issues during regular use, customers can avail themselves of free-of-charge maintenance by sending the product to an authorized retailer or maintenance center. However, please be aware that quick-wear parts such as the battery and blade are not covered under warranty and require payment for replacement.
- 3. Exceptions to Free Service: Free service will not be applicable in the following instances :
 - A. Damage caused by unauthorized maintenance or modifications.
 - B. Damage resulting from mistakes, inadvertent use, or accidents.
 - C. Damage caused by natural disasters or abnormal voltage.
 - D. Damage arising from non-compliance with the guidelines outlined in this operating manual.
- 4. Proof of Warranty: The warranty card, along with the order number, serves as valid proof of warranty. Product maintenance will only be honored with the presentation of these documents in conjunction with the original purchase invoice.