



Caliber Pro USA
13893 Willard Rd, EF, Chantilly, VA20151
All rights reserved @2024 Caliber Pro Inc
info@caliberprocorp.com, +17039913108
Follow us@caliberbeauty

Importer:
Bratt Trading Ab, Radiovägen 34
135 48 Tyresö, Sweden

EN



PROFESSIONAL CLIPPER

DESIGNED FOR THE PROFESSIONAL



Disruptor

Operating Manual

EN INSTRUCTION MANUAL

Professional hair clipper with vector motor.

Professional Hair Clipper with Vector Motor

Introducing our advanced professional hair clipper, powered by a state-of-the-art vector motor. This innovative motor technology, an evolution of the renowned magnetic motor, increases power and speed proportionally with the cutting load, ensuring consistent performance for even the most demanding cuts.

Designed for high-precision cuts and fades, this clipper features a DLC (diamond-like carbon) blade. The DLC blade offers exceptional hardness, heat resistance, and corrosion resistance, maintaining sharpness and durability over time.

The clipper also includes an adjustable lever, allowing you to easily modify cutting precision from 0.5 mm to 2.0 mm. This versatile adjustment capability makes it indispensable for achieving the exact look you desire, whether for intricate fades or precise trims.

Information about using the operating manual

- Consider the operating manual as part of the product and store it in a safe and accessible place.
- Include this operating manual if passing the appliance on to a third party.
- In the case of conflicts with national safety specifications or instructions, the national requirements must be followed.

EXPLANATION OF SYMBOLS AND NOTES



DANGER

Danger of electric shock which may result in serious physical injury or death.



WARNING


Warning of possible physical injury or a health risk.



CAUTION

Information about danger of material damage.

COMPONENTS

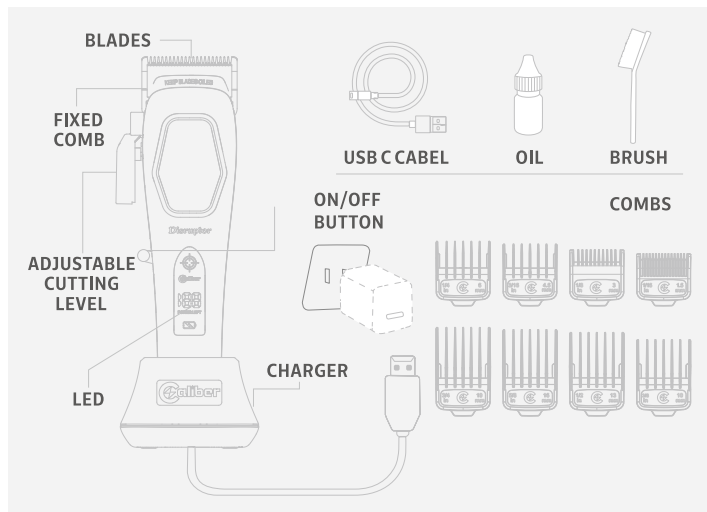

SPECIFICATIONS

- Rotation speed: 10000 rpm.
- Time of use: 180 min.
- Lithium battery: 2500 mAh.
- Noise: 70 dB.
- Power: 5 W.
- Input adapter: 100~240V ~
- Frequency: 50/60 Hz.
- Charging time: 3h.
- LED charging indicator.
- ON/OFF switch.
- DLC blade.
- 8 combs: #0(1/16"), #1(1/8"), #1.5(3/16"), #2(1/4"), #3(3/8"), #4(1/2"), #5(5/8"), #6(3/4")
- Includes lubricating oil, cleaning brush, charging base and USB type C.



Caution: This clipper is intended for cordless operation only.

Fixed-length Function

A : Features grades (1/16".1/8".3/16".1/4".3/8".1/2".5/8".3/4")


8 lengths adjustment to control hair length

1. To determine the length of haircut.

2.To select the appropriate guards.



Mount the guards :

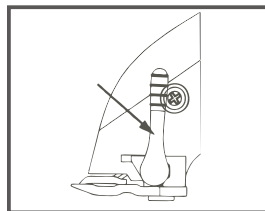


Adjust the cutter by rotating the adjusting lever from forward to downward.

Mount the guard comb:

- 1.Align the guard comb with the blade edge.
- 2.Slightly forward push to mount it.



Disassemble the guard comb:

Just pull hard the guard comb.

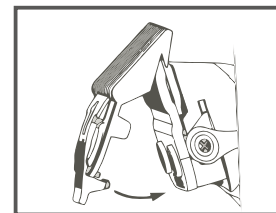


Cutter Assembly And Disassembly

"The sketch indicates that the holes in the bottom blade are larger than the shanks of the blade screws. When the blade screws are loosened, it allows for adjustment of the bottom blade using a screwdriver after aligning the blades."

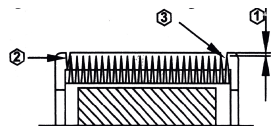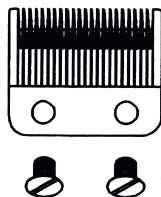

"Proper blade setting is essential for optimal performance and user safety. Follow these guidelines to ensure correct blade alignment:

The end of the top teeth should be positioned between 1/32" to 1/16" (0.79mm to 1.59mm) behind the bottom blades. This prevents the clipper from cutting too closely or the moving blades from contacting the skin. Ensure the extreme left tooth of the top blade covers or aligns with the left side of the first small tooth on the bottom blade. The extreme right tooth of the top blade should align with or slightly overlap the largest tooth on the bottom blade.

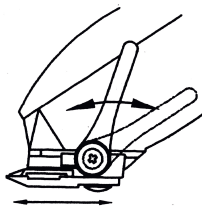

Taper Lever

The clipper is equipped with an adjustable taper lever designed to control the closeness of your cut. When the lever is in the uppermost position, the blades will provide the closest cut possible. Gradually pushing the lever downward increases the cutting length, allowing for a variety of cutting styles and lengths to be achieved.





DANGER: Before starting any cleaning and maintenance operation, switch off the appliance and disconnect it from the mains.


CLEANING AND MAINTENANCE

Blade alignment


1. Your machine has been carefully examined to ensure that the blades have been oiled and aligned before leaving our factory.
2. Blades should be realigned if they have been removed for cleaning or replacement.
3. To realign the blades simply match the teeth of the upper and lower blades, point for point. (The end of the upper blade teeth should be approximately 0.5-1.0 mm behind the lower blade. Compare the blades of your clipper to the sketch).
4. If the alignment of the blades is incorrect, add a few drops of oil to the blade, turn on the clipper for a few moments, turn it off and unplug it. Slightly loosen the screws and adjust. Tighten the screws once the blade is aligned.

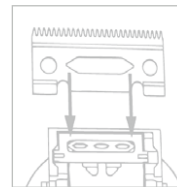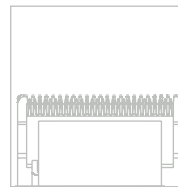

Blades cleaning and maintenance

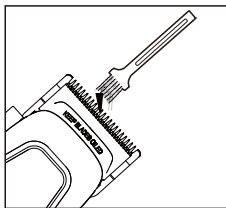

Cleaning the blade with a cleaning brush: Gently sweep the cleaning brush across the blade to remove any hair or debris, ensuring a thorough cleanup.

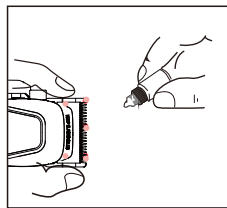

Before or after use, maintain the blade by applying a few drops of oil to the designated red points, as shown in the left picture.

User maintenance

Maintaining your device to optimize the use of your hair clipper:

- Ensuring device is unplugged, cooled and powered down, wipe body clean with slightly damp cloth DO NOT use solvents or abrasive cleaning solutions.
- Remove cut hairs from blade set with a cleaning brush.
- Clean blade set with a hygienic spray. DO NOT use other abrasive solutions. To maintain performance and cutting capability, ensure to regularly oil blade set.
- If device's performance falter even with regular cleaning and oiling, replace blade set.
- If cord becomes twisted, detangle prior to use.

Storage:

- Allow appliance to cool and then store properly out of reach of children.
- Keep device in a safe, dry location.
- DO NOT wrap cord around appliance. This will cause premature wear and damage of the cord that is not applicable to the manufacturer's warranty. Avoid bending, twisting cord straining the cord, especially at the cord to device connection.

DISPOSAL



HANDLE WITH CARE: Environmental damage in the case of incorrect disposal.



Correct disposal will ensure environmental protection and prevent any potentially harmful impacts on people and the environment. Adhere to the relevant legal requirements when disposing of the appliance.


According to the European Directives 2011/65/EU and 2012/19/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment and on waste electrical and electronic equipment.

The barred symbol of the rubbish bin shown on the equipment indicates that, at the end of its useful life, the product must be collected separately from other waste.



Therefore, any products that have reached the end of their useful life must be given to waste disposal centres specialising in separate collection of waste electrical and electronic equipment, or given back to the retailer at the time of purchasing new similar equipment on a one for one basis.

The adequate separate collection for the subsequent start-up of the equipment sent to be recycled, treated and disposal of in an environmentally compatible way contributes to preventing possible negative effects on the environment and health and optimises the recycling and reuse of components making up the apparatus. Abusive disposal of the product by the user involves application of the administrative sanctions according to the laws in force.

Note

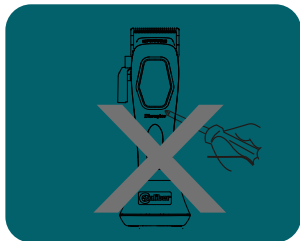

1. Avoid Disassembly: Please refrain from disassembling the product.
2. Cleaning Instructions: Only use a slightly damp cloth or neutral liquid soap to clean the product.

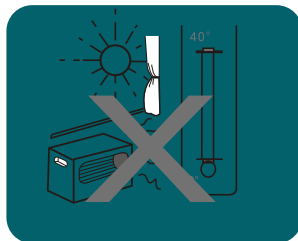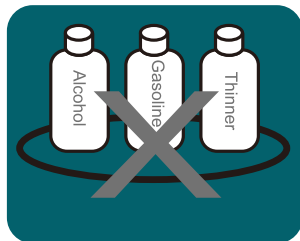

3. Temperature Guidelines: Never charge the product in environments exceeding 40°C or below 0 °C. Note that slight heating during operation or charging is normal.
4. Battery Disposal: After the battery's lifespan ends, remove and dispose of it in a safe manner at the designated recycling site. Never discard it randomly.
5. Water Avoidance: Do not use water to wash the clipper and keep it away from damp environments while in operation.

Please Read The Following Instructions Before Using The New Caliber Professional Clipper.

IMPORTANT SAFETY INSTRUCTIONS

Children should be supervised to ensure that they do not play with this appliance. When using electric appliance, especially when children are present, basic safety precautions should always be followed, including the following.

READ ALL INSTRUCTIONS BEFORE USING

WARNING: KEEP APPLIANCE DRY. KEEP AWAY FROM WATER WHEN IT IS CHARGING

DANGER: As with most electrical appliances, electric parts are electrically live when switch is OFF.

To reduce the risk of death by electric shock:

1. Do not use while bathing or in shower.
2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
3. Do not place it in or drop it into water or any other liquid.
4. If an appliance falls into water, unplug it immediately. Do not reach into the water.
5. Always unplug this appliance from the electrical outlet immediately after using. Unplug this appliance before cleaning.



WARNING: To reduce the risk of burns, electrocution, fire or injury to persons:

1. The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given instruction and supervision.
2. Children should be supervised to ensure that they do not play with this appliance.
3. An appliance should never be left unattended when plugged in.
4. Close supervision is necessary when this appliance is used by, on, or near, children or individuals with certain disabilities.
5. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
6. The appliance is only to be used with the low voltage power unit provided.
7. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, or damaged, or dropped into water. Return the appliance to a service centre for examination and repair.
8. Never allow the power supply cord to be pulled, jerked, strained, twisted, or severely bent, especially at the plug connections. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Handle the cord carefully for longer life of cord.
9. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
10. Never drop or insert any object(s) into any opening.
11. Do not use outdoors or operate where aerosol spray products are being used or where oxygen is being administered.
12. Do not use an extension cord with this appliance.
13. Never use while sleeping.
14. Do not operate with voltage converter.
15. Do not use this appliance with a damaged or broken comb, as facial injury may occur. To disconnect, turn the switch to "off" then remove plug from outlet.

SAVE THESE INSTRUCTIONS

Warranty Card

Product Name	Rechargeable Cliper for the Professional		Warranty Period	
Product Model			Within one year since the purchase date	
Purchase Date	From:	(M/D/Y)	To:	(M/D/Y)

Customer	Add.		Name	
			Tel.	
Retailer	Add.		Name	
	Name		Tel.	

Product Assurances :

1. Quality and Precision: This product is crafted with utmost precision, adhering to rigorous quality management and inspection processes to ensure excellence.
2. Maintenance Coverage: For any operational issues during regular use, customers can avail themselves of free-of-charge maintenance by sending the product to an authorized retailer or maintenance center. However, please be aware that quick-wear parts such as the battery and blade are not covered under warranty and require payment for replacement.
3. Exceptions to Free Service: Free service will not be applicable in the following instances :
 - A. Damage caused by unauthorized maintenance or modifications.
 - B. Damage resulting from mistakes, inadvertent use, or accidents.
 - C. Damage caused by natural disasters or abnormal voltage.
 - D. Damage arising from non-compliance with the guidelines outlined in this operating manual.
4. Proof of Warranty: The warranty card, along with the order number, serves as valid proof of warranty. Product maintenance will only be honored with the presentation of these documents in conjunction with the original purchase invoice.

SE



Professionell klippare

Utformad för den professionella



Disruptor

Bruksanvisning