



## How to set a new combination


1. Before installation, make sure that the **inner hole** and **outer hole** are correctly aligned.

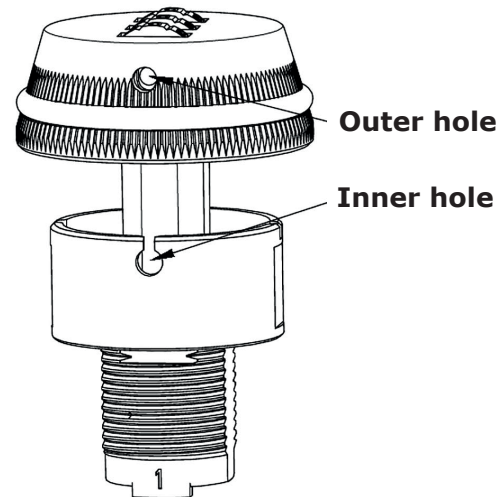

2. The two holes must be aligned with each other before the combination can be changed.

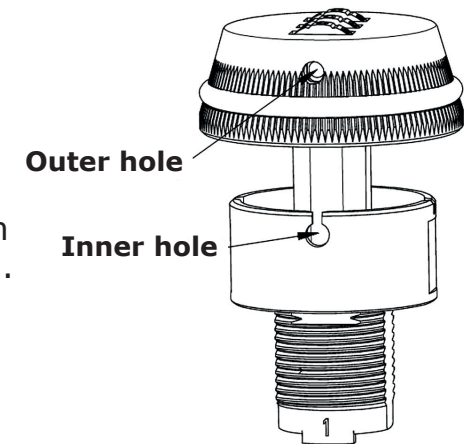

3. Make sure that the current combination is correct. Insert the **combination tool** and press and hold the combination-change button. Turn the number dials to your desired combination, then release the button.

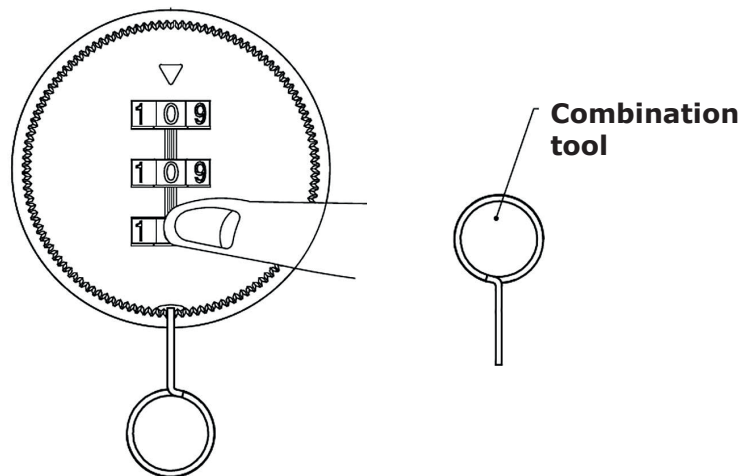

4. The new combination is now set.

