




USE & CARE INSTRUCTIONS


LCL



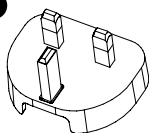
Item pictures may differ from actual product

A

AUSTRALIA

B


EUROPE

C

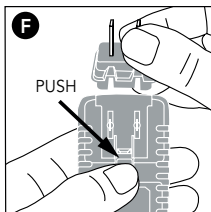
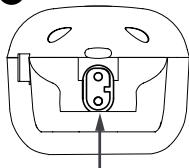
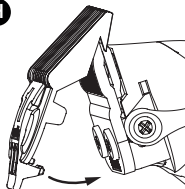
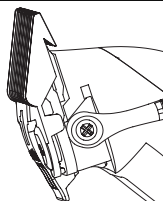
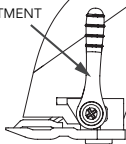
UK

D

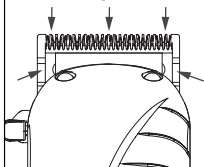
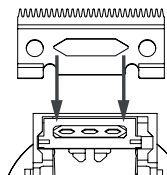
US

E

BRAZIL

F**G****H****I****J**ADJUSTMENT
LEVER**K**

OIL

**L**

ENGLISH

Please read the following instructions before using your new Andis clipper. Give it the care that a fine, precision built instrument deserves and it will give you years of service.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using the Andis clipper.

DANGER: To reduce the risk of electric shock:

1. Do not reach for an appliance that has fallen into water. Unplug immediately.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Except when charging, always unplug this appliance after use.
5. Unplug this appliance before cleaning, removing or assembling parts.

WARNING: To reduce the risk of burns, fire, electric shock, or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. This appliance can be used by children from 8

years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

3. Children shall not play with the appliance.
4. Use this appliance only for its intended use as described recommended in this by manual. Do not use attachments not recommended by Andis.
5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to an Andis authorized service station for examination and repair.
6. Keep the cord away from heated surfaces.
7. Never drop or insert any object into any opening.
8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
9. Do not use this appliance with a damaged comb or broken blade, as injury to the skin may occur.
10. To disconnect turn control to OFF then remove plug from outlet.
11. Plug adapter cord directly to an AC outlet. Do not use an extension cord.

12. Use of an adapter cord or plug not sold by Andis may person.result in risk of fire, electric shock, or injury to person.
13. Do not disassemble adapter cord or plugs. Incorrect reassembly may result in a risk of electric shock or fire. When repair is requiered, send or take to an Andis authorized service station.
14. The battery in this clipper is designed to provide maximum trouble-free life. However, like all batteries, it will eventually wear out. Do not attempt to replace battery. When repair or replacement is requierd, send or take to an Andis authorized service station.
15. Batteries can be harmful to the environment if disposed of improperly. Many communities offer recycling or battery collection. Contact your local government about disposal practices in your area.
16. **WARNING: Never touch both terminals on clipper with metal objects and/or body parts, as short circuit may result. Keep away from children. Failure to comply with these warnings could result in fire or serious injury.**
17. Keep the appliance dry.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

FOR MODELS WITH DETACHABLE PLUGS

(Plugs may vary by model)

UNIVERSAL AC/DC POWER ADAPTER

1. Remove the wall adapter and clipper from the carton.
2. The clipper comes standard with a universal AC voltage wall adapter and interchangeable plugs (Figures A-E).
3. To attach the desired plug to the wall adapter, align the slots on the plug to the ribs on the wall adapter and slide into place. The plug will "click" into place when properly attached. To remove, locate the button marked "push" on the wall adapter. Press the button and slide the plug from the wall adapter. The plugs for the various countries all attach and remove using the same method (Figure F).
4. Plug the adapter cord directly into the receptacle on the bottom of the clipper (Figure G) and then insert the transformer into an AC outlet.

FOR MODELS WITH FIXED PLUG (UK)

The clipper comes standard with a universal AC voltage wall adapter with a UK plug. **Do not attempt to remove the plug from the cord or plug into any outlet other than a UK outlet.**

CHARGING CLIPPER

The AC adapter is intended for use with Andis Model LCL lithium-ion battery with a rated capacity of 4.5V 1.2A. Remove the clipper and AC adapter from the carton. Plug the AC adapter into a 100-120V, 50-60 cycle AC outlet, or as noted on the unit. Plug the adapter cord directly into the receptacle on the bottom of the clipper (Figure G). The clipper ON/OFF switch must be in the OFF position for the battery to charge. The green light on the clipper will turn ON when the clipper is charging. When clipper is fully charged, the green light will turn OFF.

The clipper has not been charged at the factory. Please charge the clipper for 3-5 hours before FIRST use for maximum performance. When battery is fully charged, clipper can be used for up to 2 hours of continuous run time. After first use, clipper will fully charge in a minimum of 90 minutes.

FAILURE TO CHARGE

1. Make sure voltage is present at the wall outlet (confirm with an appliance you know is working).
2. Make sure ON/OFF switch on the clipper is OFF.
3. Check to make sure adapter cord is plugged firmly into clipper.
4. If failure to charge still exists, return clipper to Andis or an Andis Authorized Service Station for examination and repair or replacement.

CORDED OPERATION

If the clipper powers OFF in the middle of a clipping job, the adapter cord can be attached to continue use in corded operation. When the clipper is running with the adapter cord attached, the green light will remain ON even if the battery is not fully charged. The clipper will not charge while in use with the cord attached. After using your Andis clipper, rewrap cord and store in a safe place.

If the battery is fully charged, the green light will not turn on during corded operation.

USING THE ATTACHMENT COMBS

(Some models do not have combs and sizes will vary by kit)

You can set the blades for a longer cut by using any of the attachment combs made for your Andis clipper. The combs mount easily; simply slip the cutter blade teeth into comb and snap the comb down. To remove, simply snap off (Figures H & I). These attachment combs guide hair into the blades and give you precise control of hair lengths. The length of trim is indicated on the attachment comb. Use the chart to find the approximate lengths of cut. Different blade angles in relation to the skin, thickness and texture of the hair will vary the cutting length.

CLIPPER BLADE ADJUSTMENT

Your Andis adjustable clipper blade set is easy to adjust. From coarse to fine cuts, all that is needed is a flick of the adjustment lever with your thumb. In the upright position, the blades are set for the finest, or shortest cuts (Figure J).

CLIPPING GUIDE			
Description	Clipping Direction	Approximate Length of Cut	
		Blade set to shortest cut	Blade set to longest cut
Standard Andis Blade Set at lowest setting	With hair grain	1/16" (1.6 mm)	3/16" (4.8 mm)
	Against hair grain	1/32" (0.8 mm)	1/8" (3.2 mm)
1/8" Attachment Comb	With hair grain	1/4" (6.4 mm)	3/8" (9.5 mm)
	Against hair grain	1/8" (3.2 mm)	1/4" (6.4 mm)
1/4" Attachment Comb	With hair grain	3/8" (9.5 mm)	1/2" (12.7 mm)
	Against hair grain	1/4" (6.4 mm)	3/8" (9.5 mm)
3/8" Attachment Comb	With hair grain	1/2" (12.7 mm)	5/8" (15.9 mm)
	Against hair grain	3/8" (9.5 mm)	1/2" (12.7 mm)
1/2" Attachment Comb	With hair grain	5/8" (15.9 mm)	7/8" (22.2 mm)
	Against hair grain	1/2" (12.7 mm)	5/8" (15.9 mm)
3/4" Attachment Comb	With hair grain	7/8" (22.2 mm)	1-1/8" (28.6 mm)
	Against hair grain	3/4" (19.0 mm)	1" (25.4 mm)
1" Attachment Comb	With hair grain	1-1/8" (28.6 mm)	1-3/8" (34.9 mm)
	Against hair grain	1" (25.4 mm)	1-1/4" (31.8 mm)

USER MAINTENANCE

Cleaning and user maintenance shall not be made by children without supervision.

The internal mechanism of your motor clipper has been permanently lubricated by the factory. Other than the recommended maintenance described in this manual, no other maintenance should be performed, except by Andis Company, or an Andis Authorized Service Station.

BLADE TEMPERATURE

Due to the high speed nature of Andis clippers, please check for blade heat often, especially on close cutting blades. If blades are too hot, dip the blades only into Andis Blade Care Plus or apply Andis Cool Care Plus and then Andis Clipper Oil. If you have a detachable blade unit, you can change your blade in order to maintain a comfortable temperature; using multiple blades of the same size is popular among groomers.

CARE AND SERVICING OF YOUR ANDIS CLIPPER BLADES

The blades should be oiled before, during, and after each use. If your clipper blades leave streaks or slow down, it's a sure sign the blades need oil. Place a few drops of Andis Clipper Oil on the front and side of the cutter blades (Figure K). Wipe excess oil off the blades with a soft, dry cloth. Spray lubricants contain insufficient oil for good lubrication, but are an excellent clipper coolant. Always replace broken or nicked blades to prevent injury. You can clean the excess hair from your blades by using a small brush or an old toothbrush. To clean the blades we suggest immersing the blades only into a shallow pan of Andis Blade Care Plus while the clipper is running. Any excess hair and dirt that has accumulated between the blades should come out. After cleaning, turn your clipper off, dry the blades with a dry cloth, and start clipping again.

REMOVING AND REPLACING THE BLADE SET

To remove the blades, first unplug the clipper from the electrical outlet. Turn the clipper upside down so that the blade teeth are pointing down. You may want to place the clipper on a flat surface to do this. Unscrew the screws on the blades. Remove the blades.

To replace the blades, put the smaller, upper blade back into position (Figure L). Line up the screw holes in the bottom blade with the two holes in the clipper housing, and replace the screws. Do not tighten down the screws completely. Turn the clipper over and align the lower blade so the teeth on both blades are parallel, but with the lower blade's teeth slightly above the upper blade's teeth. Failure to do this may result in nipping the skin when cutting the hair.

USE GUIDELINES FOR LITHIUM-ION BATTERIES

1. The lithium-ion battery included with your clipper does not develop a "memory effect" like a nickel-metal hydride (NiMH), or nickel cadmium (NiCd) battery. You can plug the adapter cord into the clipper at any time for a full charge, or even use the battery before a charge cycle is complete. Like most rechargeable batteries, lithium-ion batteries perform best when used frequently.

2. For maximum battery life, store the clipper in a partially discharged condition if the unit will be unused for several months.
3. Do not store clipper under 50°F or over 104°F. Do not expose clipper to excessively damp conditions.
4. Avoid locating the clipper near heat vents, radiators, or in direct sunlight. Optimum charging will result where the temperature is stable. Sudden increases in temperature can result in the battery receiving less than a full charge.
5. Many factors influence lithium-ion battery life. A battery that has received heavy use or is more than a year old may not give the same run-time performance as a new battery pack.
6. New lithium-ion batteries, unused for a period of time, may not accept a full charge. This is normal and does not indicate a problem with the battery or adapter. The battery will accept a full charge after several cycles of clipper use and recharging.
7. Disconnect the adapter cord from the AC outlet if extended periods of non-use are anticipated.

DISPOSAL OF BATTERY PACKS

As a consumer you are legally obliged to dispose of batteries and battery packs as special waste. **After removing the battery pack, the device must be disposed of and may NOT be used again.**

BLADE & CLIPPER/TRIMMER REPAIR SERVICE

When the blades of your Andis clipper/trimmer become dull after repeated use, it is advised to purchase a new set of blades available through your Andis supplier. Some blade sets can be resharpened - contact your Andis supplier or the Andis Company for information on resharpening. If you wish your clipper/trimmer to be serviced as well, contact your Andis supplier. **If you have a problem contacting your Andis supplier contact the Andis Company customer service department at 1-262-884-2600 (USA) or email at info@andisco.com.**

CORRECT DISPOSAL OF THIS PRODUCT

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



CAUTION: Never handle your Andis clipper while you are operating a water faucet and never hold your clipper under a water faucet or in water. There is danger of electrical shock and damage to your clipper.

ANDIS COMPANY will not be responsible in case of injury due to this carelessness.

Läs dessa instruktioner innan du använder din nya Andis-klippmaskin. Din Andis-klippmaskin är ett precisions-verktyg som med god skötsel kommer att hålla i många år.

VIKTIG SÄKERHETSUPPLYSNING

lakttat alltid försiktighet när du använder elverktyg.

Tänk särskilt på följande:

Läs hela bruksanvisningen innan du använder Andis-klippmaskinen.

WARNING! Undvik risk för elstötar:

1. Tag inte i en maskin som fallit ned i vatten.
Dra omedelbart ur kontakten.
2. Använd aldrig trimmern i bad eller i dusch.
3. Placera eller förvara ej maskinen där den kan falla ned i eller dras ned i någon behållare med vatten.
Placera inte maskinen i vatten eller annan vätska.
Tappa den inte i vatten eller annan vätska.
4. Dra alltid ut kontakten efter användning (men givetvis inte om du vill lämna den på laddning).
5. Dra ur kontakten innan du rengör, plockar isär eller sätter ihop klippmaskinens delar.

WARNING! Undvik brännskador, eldsvåda, elchock och skador så här:

1. Lämna aldrig en inkopplad maskin obevakad.
2. Denna klotrimmer är avsedd att användas av barn

över 8 år och personer med funktionshinder eller av personer med bristande kunskap och erfarenhet om användning sker under tillsyn eller efter instruktion givits om risker och hur man använder maskinen på ett säkert och riskfritt sätt.

3. Se till att barn inte leker med maskinen.
4. Använd endast maskinen för avsedda ändamål och såsom beskrivs i denna bruksanvisning. Anslut endast tillbehör som är godkända av Andis.
5. Använd aldrig en maskin som har skador på kontakt eller kabel, maskin som inte fungerar korrekt, maskin som tappats eller skadats, eller utsatts för vatten. Ta den i stället till en av våra godkända Andis-reparatörer för bedömning och lagning.
6. Se till så att kabeln inte nuddar varma eller heta föremål.
7. Stoppa inte in föremål i maskinens öppningar.
8. Använd inte maskinen utomhus eller där aerosol/sprejer förekommer. Inte heller där syrgas hanteras.
9. Använd inte maskinen om kammen eller bladet är skadade. Det finns då risk för att skinnet/huden skadas.
10. Dra ur kontakten så här: Vrid kontrollen till OFF, dra sedan ur kontakten från eluttaget.
11. Anslut adapterkabeln direkt till ett eluttag. Använd inte förlängningssladd.

12. Använd bara adapterkablar eller adaptrar från Andis. Andra varianter kan orsaka brand, elchock eller personskada.
13. Plocka inte isär adapterkabeln eller kontakterna. Felaktigt montage kan orsaka elchock eller brand. Vid fel ska du skicka eller ta den till en godkänd Andis-verkstad.
14. Klippmaskinens batteri är tillverkat med längsta möjliga, problemfria livslängd som mål. Alla batterier har dock en begränsad livslängd. Försök inte byta ut batteriet. Vid fel ska du skicka eller ta den till en godkänd Andis-verkstad.
15. Batterier kan vara skadliga för miljön om de slängs/återvinns på fel sätt. Många städer har återvinning eller insamling av batterier. Kontakta din kommun för att ta reda på återvinningsrutiner i ditt område.
16. **VARNING: Vidrör aldrig klippmaskinens båda poler med metalföremål och/eller kroppsdelar eftersom kortslutning kan uppstå. Håll borta från barn. Misslyckande att följa dessa varningar kan resultera i brand eller allvarlig skada.**
17. Håll maskinen torr.

SPARA DESSA INSTRUKTIONER

BRUKSANVISNING

FÖR MODELLER MED LÖSTGBAR ADAPTER

(Adaptertrar kan skilja sig beroende på vilket modell du köpt)

ALLMÄN ELSTRÖMSOMVANDLARE

1. Ta upp väggadaptern och klippmaskinen ur kartongen.
2. Klippmaskinen levereras med en allmän elströmsomvandlare och utbytbara adaptertr (Figur A-E)
3. För att fästa önskad adapter-kontakt, sätt skårorna mot elströmsomvandlarens tappar och skjut den på plats. Kontakten kommer att "klicka" på plats när den sitter tätt. För att ta bort, använd knappen "push" på elströmsomvandlaren. Tryck på knappen och skjut bort kontakten från elströmsvandlaren. Alla kontakter för olika länder fästs och tas bort med samma metod (Figur F).
4. Anslut adapterkabeln direkt till kontakten på klippmaskinens underdel (Figur G) och anslut sedan transformatorn till ett eluttag.

FÖR MODELLER MED FAST ADAPTER (STORBRITANNIEN)

Klippmaskinen levereras med en allmän elströmsomvandlare och en adapter för Storbritannien. **Försök inte ta bort adaptern från kabeln och anslut inte adaptern till något annat än ett brittiskt eluttag.**

LADDA KLIPPMASKINEN

Elströmsomvandlaren är avsedd för användning med Andis LCL litiumjonbatteri med nominell kapacitet på 4,5 V·1,2 A. Ta upp klippmaskinen och elströmsomvandlaren ur kartongen. Anslut elströmsomvandlaren till ett 100-120 V, 50-60 Hz-eluttag, eller enligt anvisningarna på enheten. Anslut adaptern direkt till klippmaskinens underdel (Figur G). Klippmaskinens ON/OFF-vred måste stå i läge OFF när batteriet laddas. När klippmaskinen laddas lyser den gröna lampan. Den gröna lampan släcks när klippmaskinen är fulladdad.

Klippmaskinen är inte laddad vid leverans. Ladda klippmaskinen i 3-5 timmar före FÖRSTA användning. Då uppnås bästa batteriprestanda. När batteriet är fulladdat kan klippmaskinen användas i upp till 2 minuter. Efter första användningen blir klippmaskinen fulladdad på minst 90 minuter.

OM LADDNINGEN MISSLYCKAS

1. Se till att det finns spänning (ström) i vägguttaget. Testa med en lampa eller apparat som du vet fungerar.
2. Se till att klippmaskinens ON/OFF-vred står i läge OFF.
3. Kontrollera att adapterkabeln är ordentligt ansluten till klippmaskinen.
4. Om klippmaskinen fortfarande inte laddar ska du ta den till en av våra godkända reparatörer för bedömning, lagning eller byte.

KABELDRIFT

Om klippmaskinen stängs av under användning, kan strömkabeln anslutas för att fortsätta använda maskinen med kabeldrift. När klippmaskinen drivs med adapterkabeln ansluten lyser den gröna lampan, även om batteriet inte är fulladdat. Klippmaskinen laddar inte när den används med kabeln ansluten. Efter användning / ska kabeln lindas upp och Andis-klippmaskinen förvaras på ett säkert ställe.

Om batteriet är fulladdat lyser inte den gröna lampan vid kabeldrift.

ANVÄNDA TILLBEHÖRSKAMMAR

(Vissa modeller saknar utbytbara kammar och förekommer i olika storlekar beroende på vilket trimmerpaket du köpt)

Du kan anpassa apparaten för längre klippning genom att använda någon av kammar-na till Andis-klippmaskinen. Kammarerna är lätta att montera: placera bladet i kammen och knäpp ner kammen och knäpp ner kammen. Knäpp loss kammen för att ta bort den (Figur H & I). Dessa tillbehörskammar riktar håren/pälsen mot bladen så du får en enhetlig hårlängd. Hårlängden/pålstjockleken anges på kammen. I tabellen se du en sammanställning över blad respektive hår- och påls längd. Olika bladvinklar samt hårets/pälsens tjocklek och textur ger olika klipplängder.

KLIPPBLADJUSTERING

Din Andis-maskins justerbara klippblad är enkla att justera. Från grova till fina klippningar, allt som behövs är ett tryck med tummen på justeringsspaken, i upprätt läge är bladen inställda för den finaste eller kortaste klippningen (Figur J).

KLIPPNINGSVÄGLEDNING

Beskrivning	Klippningsriktning	Ungefärlig längd på klippt hår	
		Blad inställda på kortaste klippning	Blad inställda på längsta klippning
Andis standardblad Välj kortaste inställningen	Medhårs	1/16" (1.6 mm)	3/16" (4.8 mm)
	Mothårs	1/32" (0.8 mm)	1/8" (3.2 mm)
1/8" tum tillbehörskam	Medhårs	1/4" (6.4 mm)	3/8" (9.5 mm)
	Mothårs	1/8" (3.2 mm)	1/4" (6.4 mm)
1/4" tum tillbehörskam	Medhårs	3/8" (9.5 mm)	1/2" (12.7 mm)
	Mothårs	1/4" (6.4 mm)	3/8" (9.5 mm)
3/8" tum tillbehörskam	Medhårs	1/2" (12.7 mm)	5/8" (15.9 mm)
	Mothårs	3/8" (9.5 mm)	1/2" (12.7 mm)
1/2" tum tillbehörskam	Medhårs	5/8" (15.9 mm)	7/8" (22.2 mm)
	Mothårs	1/2" (12.7 mm)	5/8" (15.9 mm)
3/4" tum tillbehörskam	Medhårs	7/8" (22.2 mm)	1-1/8" (28.6 mm)
	Mothårs	3/4" (19.0 mm)	1" (25.4 mm)
1" tum tillbehörskam	Medhårs	1-1/8" (28.6 mm)	1-3/8" (34.9 mm)
	Mothårs	1" (25.4 mm)	1-1/4" (31.8 mm)

SKÖTSEL

Rengöring och skötsel ska inte göras av barn utan tillsyn.

Det inre av maskinen har smorts på ett bestående sätt under tillverkningen. Gör inget annat underhåll själv än vad som beskrivs här. Endast Andis Company eller någon av våra godkända reparatörer, Andis Authorized Service Station, får hantera klippmaskinen inuti eller på andra sätt än vad som beskrivs här.

BLADTEMPERATUR

På grund av Andis-maskinernas höga klippastighet ska du kontrollera bladtemperaturen ofta. Detta gäller särskilt vid användning av kortklippande blad. Om bladen är för varma: Doppa endast bladen i Andis Blade Care Plus. Eller ta på lite Andis Cool Care Plus och därefter Andis Clipper Oil. Om du har en utbytbar bladenhet kan du byta mellan blad av samma storlek. Så undviker du överhettning under arbetet.

SKÖTSEL AV ANDIS KLIPPBLAD

Bladen ska oljas före, under och efter användning. Om bladen ger ränder i klippningen, eller saktar ned är det ett tecken på att de behöver olja. Droppa några droppar Andis Clipper Oil på klippbladets framsida och sida (Figur K). Stryk av eventuell överskottsolja med en mjuk och torr duk. Smörjsprej innehåller för lite olja för att smörja mekanismen, men fungerar bra som kylmedel. Byt alltid ut skadade eller slöa blad för att undvika risk för kroppsskada. Borsta bort hårrester från bladet med en pensel eller gammal tandborste. Du kan göra rent bladen genom att, när maskinen är i gång, doppa enbart bladen i en grund skål med Andis Blade Care Plus. Hår, ull, skräp och smuts rensas nu ut. När du är klar med denna rengöring – stäng av klippmaskinen. Torka av bladen med en mjuk duk och börja klippa på nytt.

TA BORT OCH BYTA UT BLADEN

Dra ur klippmaskinen från eluttaget innan du tar bort bladen. Håll klippmaskinen så att bladets tänder är vända nedåt. Du kan placera klippmaskinen på en plan yta när du gör detta. Skruva ur skruvarna på bladen. Ta bort bladen.

För att sätta tillbaka bladen, sätt det mindre, övre bladet på plats (Figur L). Passa in skruvhålen i det nedre bladet med de två hålen i klippmaskinens hölje och sätt tillbaka skruvarna. Dra inte åt skruvarna helt. Bänd på klippmaskinen och justera det nedre bladet så att tänderna på båda bladen är parallella, med det nedre bladets tänder strax ovanför de övre bladets tänder. Om detta inte görs kan huden klämmas när du klipper håret.

ANVÄNDNINGSGRÄNSLINJER FÖR LITIJONBATTERIER

1. Litiumjonbatteriet i din klippmaskin utvecklar ingen "minnsfunktion" som ett nickel-metallhydrid-batteri (NiMH) eller ett nickel-kadmium-batteri (NiCd). Du kan när som helst ansluta adapterkabeln till klippmaskinen för att ladda den fullt eller använda batteriet innan laddningen är klar. Likt de flesta uppladdningsbara batterier presterar litiumjonbatterier bäst när den används ofta.

2. För maximal batterilivslängd, förvara klippmaskinen delvis urladdad om den inte kommer att användas på flera månader.
3. Klippmaskinen får inte förvaras i temperaturer under 50°F eller över 104°F. Utsätt inte klippmaskinen för extremt fuktig miljö.
4. Undvik att placera klippmaskinen nära varmluftskällor, radiatorer och/eller direkt solljus. Bästa laddningsresultat uppnås i en miljö med stabil temperatur. Plötsliga temperaturhöjningar kan medföra att batteriet inte laddas fullständigt.
5. Ett antal faktorer påverkar litiumjonbatteriets livslängd. Ett batteri som använts intensivt eller som är över ett år gammalt har kanske inte samma prestanda som ett nytt.
6. Nya litiumjonbatterier som inte använts under en viss period, kanske inte laddas fullt. Detta är normalt och utgör inget problem med batteriet eller adaptern. Batteriet kommer att laddas fullt när klippmaskinen har använts och laddats ett par gånger.
7. Koppla ur adapterkabeln från eluttaget om du räknar med att inte använda den på ett tag.

KASSERING AV BATTERIPACK

Du är som konsument juridiskt skyldig att kassera batterier och batteripack som specialavfall. **När batteripacket har tagits bort måste enheten kasseras och får INTE användas igen.**

REPARATION AV KLIPPMASKIN/TRIMMER & BLAD

Efter flitig användning kan Andis-bladen bli slöa. Vi rekommenderar att du köper en ny uppsättning blad hos en Andis-återförsäljare. Vissa blad kan slipas - kontakta din Andis-leverantör eller Andis för information om slipning. Kontakta din Andis-återförsäljare om du även vill serva din klippmaskin. **Om du har problem med att kontakta din Andis-leverantör, kan du kontakta Andis kundservice på 1-262-884-2600 (USA) eller info@andisco.com.**

AVFALLSSORTERING

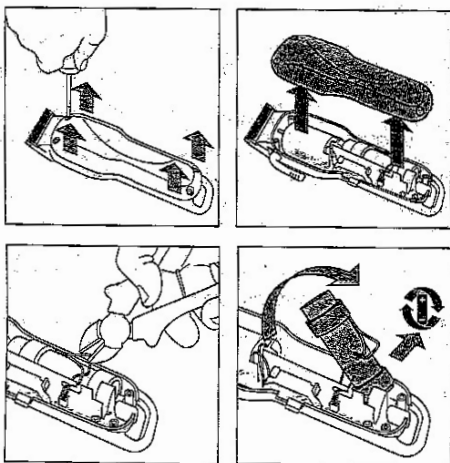
Denna markering anger att maskinen inte ska slängas i hushållssoporna. Detta gäller inom hela EU. Skydda miljö och hälsa från värdslös avfallshantering. Sopsortera ansvarsfullt för att säkerställa återanvändning av olika material. Kassera uttjänta maskiner genom retur och insamlingssystemet eller lämna in den där du köpte den. Försäljningsstället kan ombesörja en miljöriktig återvinning.



VARNING: Använd aldrig Andis-klippmaskinen i närheten av öppna vattenkranar. Håll aldrig maskinen under rinnande vatten eller under vatten. Det finns då risk för elchock och maskinskada. **FÖRETAGET ANDIS ansvarar inte för följderna av ett dylikt felaktigt beteende.**

BATTERY REMOVAL DIAGRAM

BATTERIBORTTAGNINGSBILD



Model LCL (100-240V, 50/60 Hz)

To find an Andis Authorized Service Station or access this manual online go to **andis.com**

På **andis.com** hittar du kontaktinformation till våra auktoriserade Andis-reparatörer.



© 2022 ANDIS COMPANY
1800 Renaissance Blvd. Sturtevant, WI 53177 USA
1-262-884-2600 | info@andisco.com

FORM #102913