


# DISICIDE® PLUS+ SPRAY MACHINE


DISICIDE®




Disicide® Plus+ Spray Machine is equipped with a pneumatic pump to produce superheated steam, which has an effective function of converting Disicide® Plus+ into superheated gaseous molecule (140 degrees, 0.26nm in diameter)

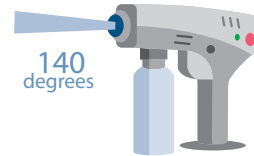


For **gentle disinfection** of tools and accessories for Barber, Spa, Tattoo, Pet grooming, Nail-bars, Hair & Beauty Salons, Hotels and Fitness centers

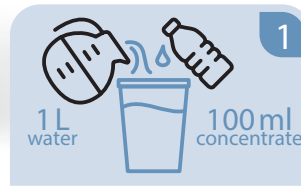

For Disicide® Plus+ Concentrate: **mix 100 ml concentrate to 1000 ml water** beforehand. Fill container with solution.

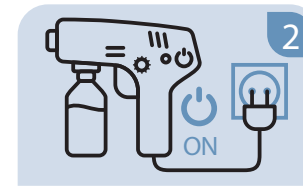


Turn on the **power switch**.

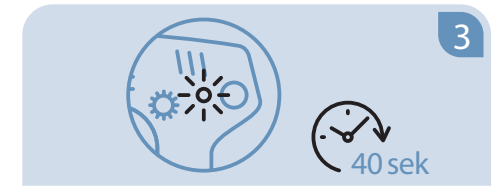

**Wait for about 40 seconds** for the machine to preheat, until the green light comes on and the sprayer begins releasing superheated gaseous molecule.



Can be used with Disicide® Plus+ Universal Disinfectant Spray

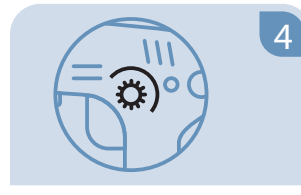

**Rotate the regulator** to adjust the spraying intensity from weak (anticlockwise) to strong (clockwise).



**Process the surface** for at least 10 seconds.



Allow the surface to **air dry**.